

LOW END SWITCH - It sets the gain related low frequency

MID KNOB - It adjusts the tone at the middle frequency

GAIN KNOB - It adjusts the amount of drive

VOLUME KNOB - It adjusts the volume

GAIN STRUCTURE SWITCH - It sets the overall gain level

TREBLE KNOB - It adjusts the tone at the high frequency

TOP END SWITCH - It sets the picking attack

BASS KNOB - It adjusts the tone at the low frequency

MID RANGE SWITCH - It sets the mid frequency point

RESONANCE KNOB - It adjusts the low end frequency

TONE INDESTITY INDICATOR - It shows the status of the TONE INDESTITY

SIGNAL OUTPUT JACK - Connecting it to the input of a guitar amp or other effect processor

PEDAL SWITCH - It turns the effect on / off.

PEDAL INDICATOR - It shows the status of the pedal

GAIN SATURATION INDICATOR - It shows the status of GAIN SATURATION

G.S.&T.I. SELECT SWITCH - It used for selecting both GAIN SATURATION and TONE INDESTITY

PRESENCE - It adjusts the presence

SIGNAL INPUT JACK - It accepts signals coming from the guitar

POWER - Only accepts the connection of a 9V DC adaptor. Center negative polarity. **NEVER PLUG INTO VOL HIGHER THAN 9V DC**



- WARNING - - Please only use 9v DC adaptor. Center negative polarity. **NEVER PLUG INTO VOL HIGHER THAN 9V DC** - NO BATTERY OPTION - Please don't remove the back plate

WARRANTY CARD

SERIAL NO.:

PURCHASE DATE (DD/MM/YY): / /

MR. / MRS. / MISS.: _____

TELEPHONE NUMBER: _____

ADDRESS: _____

E-MAIL: _____

DEALER'S NAME: _____

DEALER'S TELEPHONE NUMBER: _____

DEALER'S ADDRESS: _____

IMPORTANT! Please store purchase invoice copy together with this card for future reference.

Your SINVERTEK pedals come with a one year limited warranty

Warranty service does not include damaged, modified or misused pedals and such pedals will be subject to a standard repair charge.

DRIVE N5 PLUS